

KUNTRY KUSTOM RV MAINTENANCE SCHEDULE						
Item	Each Trip	1 Mo	3Mo	6Mo	Annual	As Needed
<u>Axles</u> Visual inspection every trip with mounting bolts tightened at 6 months	X			X		X
<u>Breakaway Switch</u> Check to see battery will activate brakes with switch	X					
<u>Coupler Ball</u> Check for unusual wear, lube sufficiently, and lock mechanism.	X					
<u>Safety Chains</u> Check for unusual wear on links, make fastening properly.	X					
<u>Weight/Distribution</u> Be sure unit is within specific load limits and weight distribution.	X					X
<u>Tires</u> Tighten lug nuts to torque specifications and check for tire wear. Check tire pressure.	X					X
<u>Safety Equipment</u> Clean smoke detector and test each trip.	X	X				X
<u>Appliances</u> Remove food from refrig After each trip. Clean fan blades and wash range hood filter.	X					X

Item	Each Trip	1 Mo	3Mo	6Mo	Annual	As Needed
<u>Water &amp; Drainage</u> Check fittings, hoses. Look for leaks. Winterize if necessary.	X					X
<u>Windows</u> Adjust and lubricate window latches.		X				X
<u>Fiberglass Exterior</u> Wash with warm water and mild detergent. Do not power wash. Wax.	X					X
<u>Electrical System</u> Check GFCI circuits and service batteries.	X					X
<u>Brakes</u> Check operation, adjust properly with truck and look for uneven wear.				X		X
<u>Frame/Underbody</u> Check for rust/damage. Paint/seal with inhibitor.				X		X
<u>Doors</u> Lubricate door hinges. Lube door locks on all exterior and cargo doors.				X		X
<u>Wheel Bearings</u> Repack wheel bearings yearly					X	X

Item	Each Trip	1 Mo	3Mo	6Mo	Annual	As Needed
<u>Roof</u> Clean every 180 days. Inspect and reseal as needed.				X		X
<u>Awning</u> Clean and lubricate parts as necessary.					X	X
<u>Seals/Adhesives</u>			X			X
Inspect and reseal every 90 days.						